

ABB		ABB Industry Oy Marine		Document No.	3AFV7019 2000 206	Sheet	8/ 14
Revision	Date	Reason for issue	Title		Language		
A	14.1.2000	User's Manual	CARNIVAL VICTORY		en		

6. EQUIPMENTS FOR EXCITATION IN E1/E2 CUBICLE

AUXILIARY VOLTAGE SUPPLY SWITCHES

1. Open main breaker and excition circuit breaker.
Note: Excitation circuit breaker is operated manually from MS-cubicle.
2. Change switch.
3. Close circuit breakers.

RELG 10s EARTH FAULT RELAY

Setting 150k Ω .

1. Open main breaker and excition circuit breaker.
Note: Excitation circuit breaker is operated manually from MS-cubicle.
2. Open circuit breaker E2F32.
3. Change relay.
4. Close circuit breakers.

PULSE AMPLIFIER SCYC 51071

1. Open main breaker and excition circuit breaker. Make temporary earthing to excitation circuit.
Note: Excitation circuit breaker is operated manually from MS-cubicle.
2. Open auxlliary voltage circuit breaker:
E1/F31 for excitation 1
E2/F31 for excitation 2
3. Change board. Remove temporary earthing from excitation circuit.
4. Close circuit breakers.

PHASE CONTROL BOARD SCYC 51050

1. Open main breaker and excition circuit breaker. Make temporary earthing to excitation circuit.
Note: Excitation circuit breaker is operated manually from MS-cubicle.
2. Open auxiliary voltage circuit breaker E1/F21
3. Check jumpers and switches.
4. Change board. Remove temporary earthing from excitation circuit.
5. Close circuit breakers.